


M998

CLIMATE CONTROL SYSTEM

CALIBRATION MANUAL


09.22

by RESTOMOD AIR 

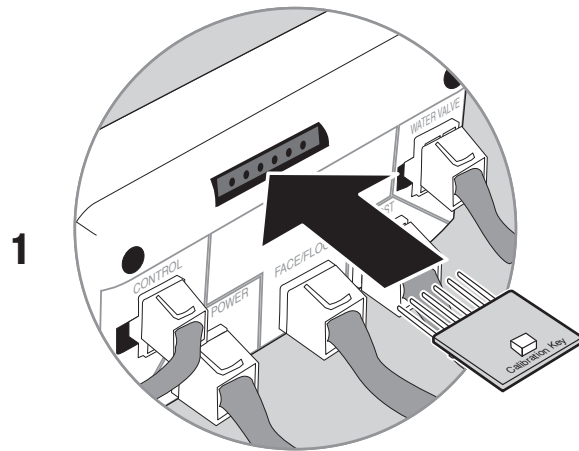


Insert Calibration Key as shown (LED side up)
into 6-pin connection in ECU

2

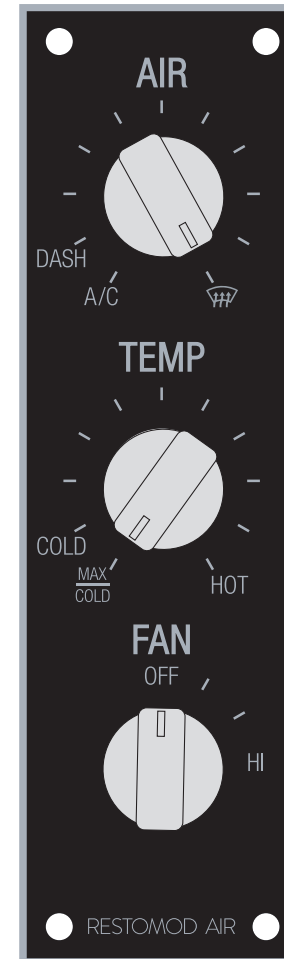


Start by positioning the knobs as shown:
Fan: OFF
Mode: DEFROST
Temp: MAX COLD


3

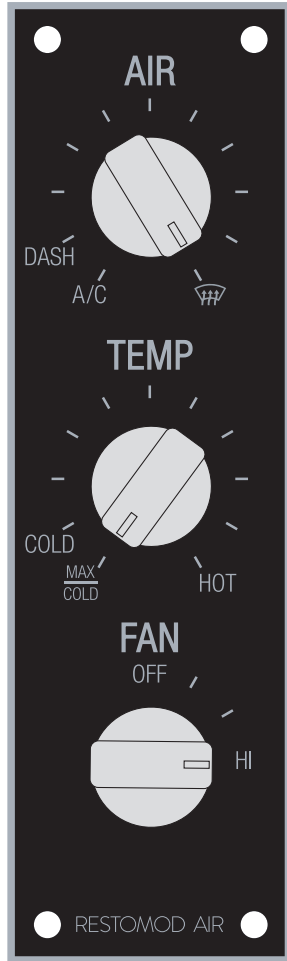


Move Fan Knob to High...

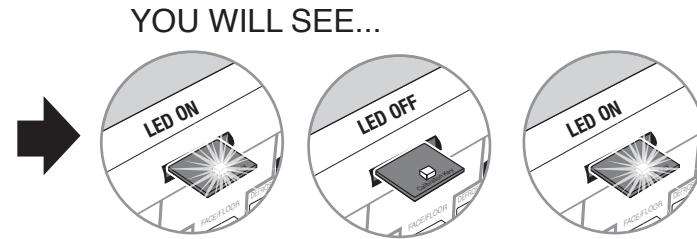

4

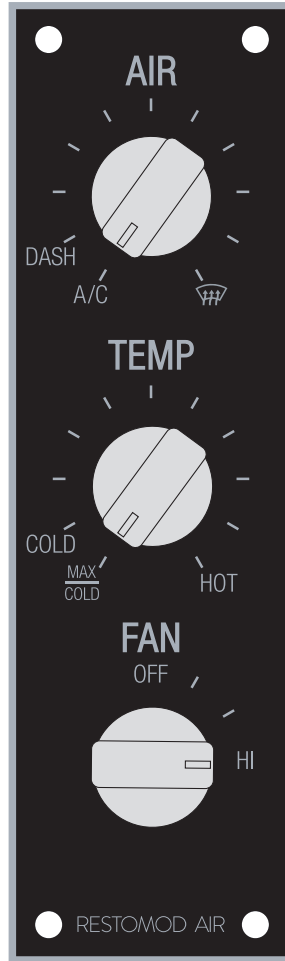


AFTER YOU MOVE THE KNOB YOU WILL SEE...

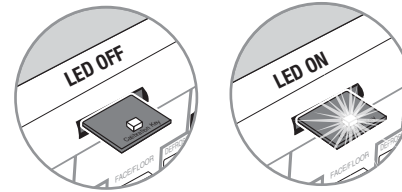


Move MODE knob to A/C
in one motion

5



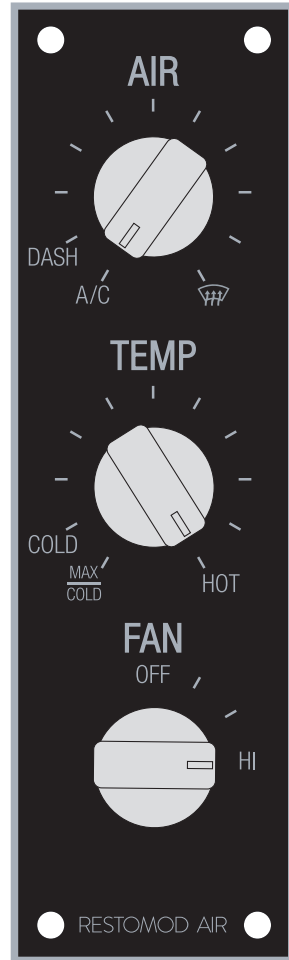


AFTER YOU MOVE THE KNOB YOU WILL SEE...

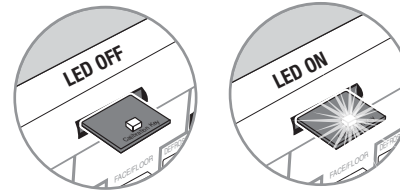


Move TEMP knob to HOT
in one motion

- 6 You will be able to hear the internal door(s) move back and forth and feel air coming out of the outlets

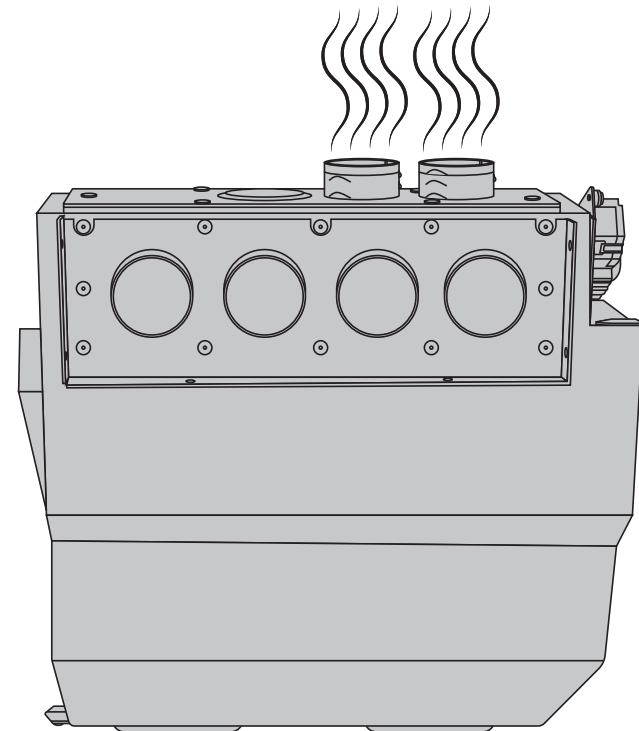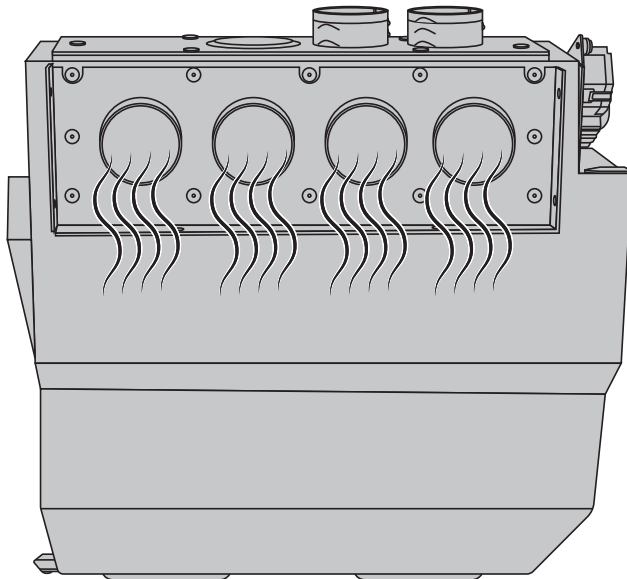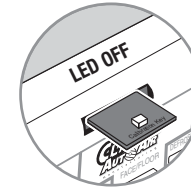


7

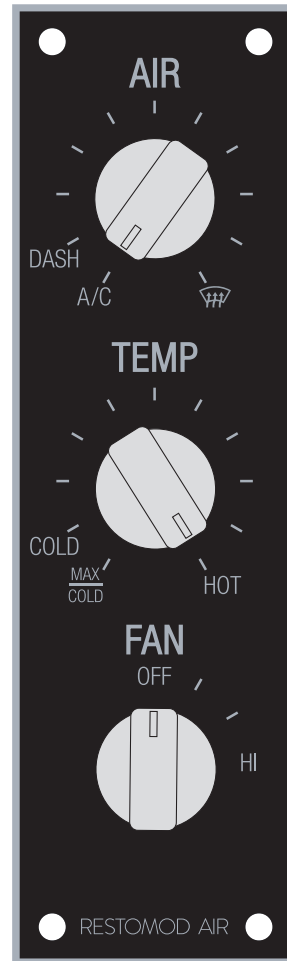

Move **FAN** knob to **OFF**

8

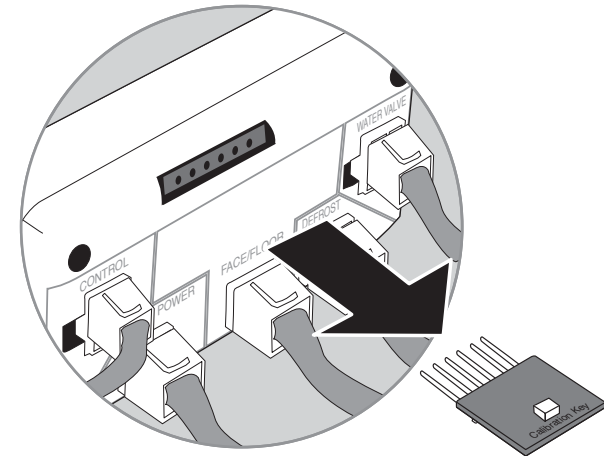

REMOVE CALIBRATION KEY FROM ECU
AND STORE IN A SAFE PLACE